


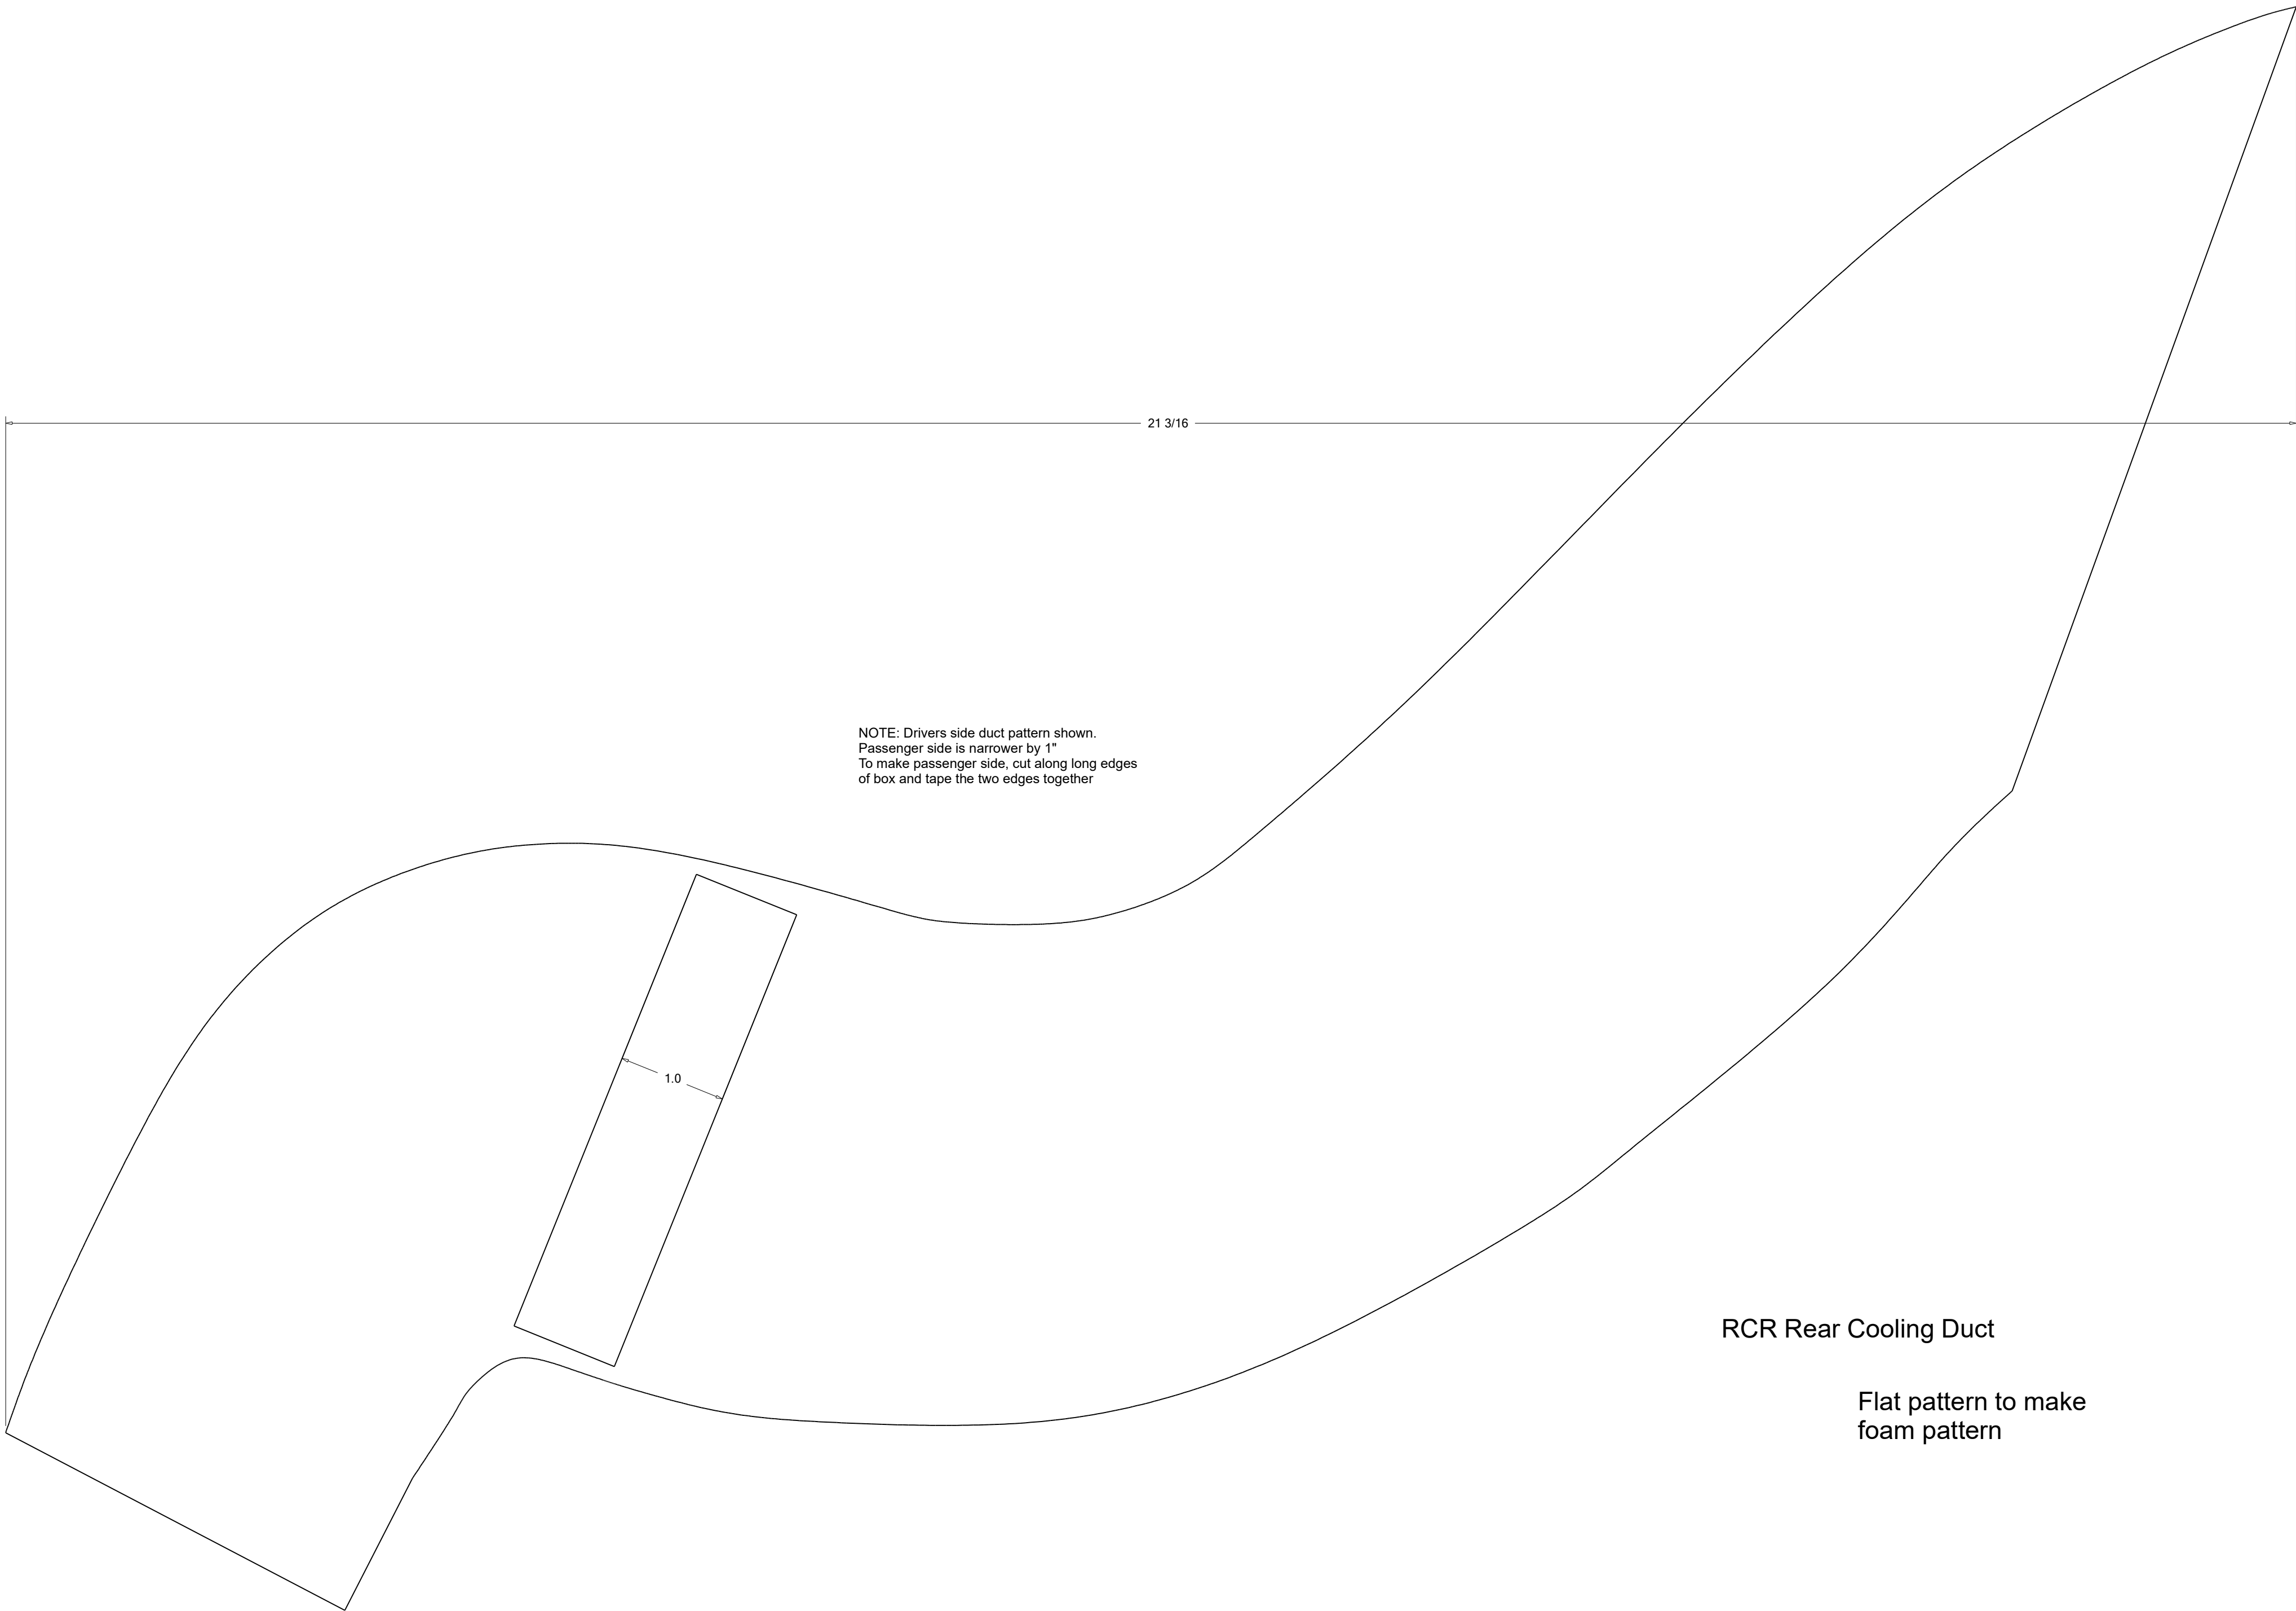

NOTE: Drivers side duct pattern shown.
Passenger side is narrower by 1"
To make passenger side, cut along long edges
of box and tape the two edges together

RCR Rear Cooling Duct

Flat pattern to make
foam pattern